


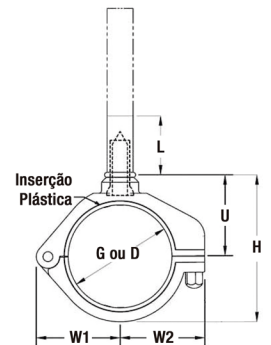


## ABRAÇADEIRAS - SUPORTE

### CH-PS/CH-PG - ABRAÇADEIRA SUPORTE DINÂMICA

Ø Tubo em Pol.	Fixador	Guia	Dimensões								Código
			D	G	W1	W2	Z	L min	U	H	
1/4	0.25	0.29	0.93	1.02	0.75	1.26	0.95	1.54	0.63	0.34	CH-PS-025-T.
3/8	0.38	0.40	0.93	1.02	0.75	1.26	0.95	1.54	0.63	0.34	CH-PS-038-T.
1/2	0.50	0.54	0.93	1.02	0.75	1.26	0.95	1.54	0.63	0.34	CH-PS-050-T.
3/4	0.75	0.79	1.06	1.15	0.75	1.26	1.07	1.77	0.63	0.36	CH-PS-075-T.
1	1.00	1.04	1.20	1.28	0.75	1.26	1.20	2.04	0.63	0.37	CH-PS-100-T.
1 1/2	1.50	1.54	1.45	1.56	0.75	1.26	1.45	2.53	0.63	0.39	CH-PS-150-T.
2	2.00	2.04	1.74	1.79	0.75	1.26	1.70	3.03	0.63	0.44	CH-PS-200-T.
2 1/2	2.50	2.55	2.02	2.04	1.00	1.36	2.04	3.63	0.75	0.62	CH-PS-250-T.
3	3.00	3.05	2.27	2.29	1.00	1.36	2.29	4.13	0.75	0.64	CH-PS-300-T.
4	4.00	4.05	2.76	2.79	1.00	1.36	2.79	5.13	0.75	0.73	CH-PS-400-T.
6	6.00	6.05	3.98	4.46	1.50	1.78	4.16	7.74	1.00	2.42	CH-PS-600-T.



### CONFIGURADOR DE CÓDIGOS

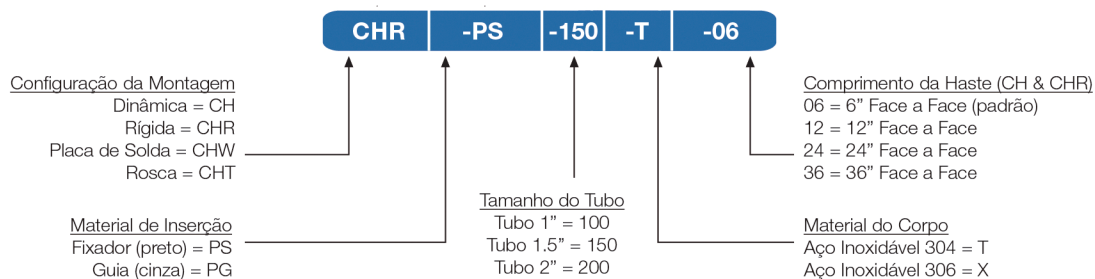

### CHR-PS/CH-PG - ABRAÇADEIRA SUPORTE RÍGIDA

Ø Tubo em Pol.	Fixador	Guia	Dimensões								Código
			D	G	W1	W2	Z	U min	H	L	
1/4	0.25	0.29	0.93	1.02	0.75	1.08	1.67	??	1/2"	0.26	CHR-PS-025-T.
3/8	0.38	0.40	0.93	1.02	0.75	1.08	1.67	??	1/2"	0.26	CHR-PS-038-T.
1/2	0.50	0.54	0.93	1.02	0.75	1.08	1.67	??	1/2"	0.26	CHR-PS-050-T.
3/4	0.75	0.79	1.06	1.15	0.75	1.23	1.93	??	1/2"	0.27	CHR-PS-075-T.
1	1.00	1.04	1.20	1.28	0.75	1.35	2.19	??	1/2"	0.30	CHR-PS-100-T.
1 1/2	1.50	1.54	1.45	1.56	0.75	1.66	2.74	??	1/2"	0.33	CHR-PS-150-T.
2	2.00	2.04	1.74	1.79	0.75	1.85	3.18	??	1/2"	0.36	CHR-PS-200-T.
2 1/2	2.50	2.55	2.02	2.04	1.00	2.18	3.77	??	5/8"	0.73	CHR-PS-250-T.
3	3.00	3.05	2.27	2.29	1.00	2.34	4.18	??	5/8"	0.73	CHR-PS-300-T.
4	4.00	4.05	2.76	2.79	1.00	3.08	5.42	??	3/4"	0.84	CHR-PS-400-T.
6	6.00	6.05	3.98	4.46	1.50	4.45	8.03	??	1"	2.81	CHR-PS-600-T.

